

BLV512 BLL510 DISPLAY MODULES FOR USE WITH THE FIREYE® BurnerLogix™ CONTROL SYSTEM



DESCRIPTION

The BurnerLogix system offers optional vacuum fluorescent (VFD) and liquid crystal (LCD) displays that may be either plugged in or mounted remotely to give full language descriptors of current status and diagnostic lockout information.

In order to change the factory default parameters stored in the programmer module an optional keypad/display (BLV512 or BLL510) is required. All configurable parameters are stored within the PROGRAM SETUP sub-menu. The keypad/display module provides tactile feedback keys that are used to access the sub-menus inherent in the BurnerLogix system.

The optional alpha-numeric display is made up of 2 lines by 16 characters per line and is available in either vacuum fluorescent or liquid crystal formats. The advantage of VFD is high brightness and extended temperature range to -40°F. Both displays contain a fully functional keypad allowing the user to easily scroll through the various menus to view the current operating status, review programmer configuration, and lockout history.

When mounted remotely using kits 129-178-4 or 129-178-8, each display meets NEMA 4X requirements. Refer to instruction sheet 133-675 for details.

INSTALLATION PROCEDURE

The display module is held into the BurnerLogix chassis/amplifier by mounting tabs designed into the display housing.

Using the thumb and index finger, grasp the left and right edges of the blank display module and pull forward until removed. Insert one end of the supplied 4 inch display cable into the jack located in the back of the display module. Plug the other end of the cable into the jack located inside the chassis/amplifier module.

 
Using the thumb and index finger, grasp the left and right edges of the blank display module and insert it into the compartment of the chassis/amplifier module. Push the unit into the unit until a positive click is realized.



Refer to bulletin BL-1001 for complete information



Keypad Description

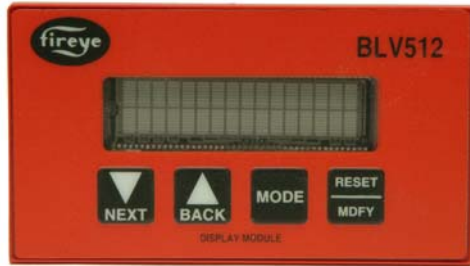

The NEXT key is used to scroll down through the various menus and is also used to increment the value when in the modify mode. The BACK key is used to scroll up through the menus and is also used to decrement the value when in the modify mode. The MODE key is used to enter a sub-menu when the displayed item indicates a sub-menu with a right facing arrow and also to exit the sub-menu and move on to the next main menu item. The RESET/MDFY

key is used to reset the BurnerLogiX from a lockout condition, force a recycle of the programmer, indicate to the system the value displayed is to be modified or when done with the modification.

List of display of main menu items in BurnerLogiX:

L1-3 OPEN	current operating status
BNR HOURS	total hours terminal 7 (main fuel) is energized
BNR CYCLES	total burner cycles
BNR LOCKOUTS	total system lockouts
SYS HOURS	total hours installed
PROGRAM SETUP >	review and set program parameters
LOCKOUT HISTORY >	last 10 lockouts with burner hour and cycle time stamp.
SYSTEM INFO >	view flame signal averages, M-D and M-8 status, select language, clear history feature.

TO VIEW AND MODIFY A PROGRAMMABLE PARAMETER:

On display module BLV512 or BLL510, use the NEXT or BACK key to scroll to PROGRAM SETUP. Press the MODE key to enter the submenu showing all program setup parameters. Pressing the MODE key while in the sub-menu will exit the sub-menu, and the next main menu item will be displayed. While in the sub-menu, pressing the NEXT key will scroll forward through the sub-menu. Pressing the BACK key will scroll backward through the sub-menu. When a modifiable parameter is displayed, pressing the RESET/MDFY key will allow the displayed parameter to be modified. Use the NEXT or BACK keys to select the value to suit the application and when done, press the RESET/MDFY to save the value to memory.

NOTICE

When Fireeye products are combined with equipment manufactured by others and/or integrated into systems designed or manufactured by others, the Fireeye warranty, as stated in its General Terms and Conditions of Sale, pertains only to the Fireeye products and not to any other equipment or to the combined system or its overall performance.

WARRANTIES

FIREYE guarantees for *one year from the date of installation or 18 months from date of manufacture* of its products to replace, or, at its option, to repair any product or part thereof (except lamps, electronic tubes and photocells) which is found defective in material or workmanship or which otherwise fails to conform to the description of the product on the face of its sales order. **THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES AND FIREYE MAKES NO WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.** Except as specifically stated in these general terms and conditions of sale, remedies with respect to any product or part number manufactured or sold by Fireeye shall be limited exclusively to the right to replacement or repair as above provided. In no event shall Fireeye be liable for consequential or special damages of any nature that may arise in connection with such product or part.



FIREYE®
3 Manchester Road
Derry, New Hampshire 03038 USA
www.fireeye.com

BD-5001
MAY 24, 2005

