

# Wiring Cross Reference

HONEYWELL R7795B 1009  
TO MEC120, MEP230, MERT4, 61-3060  
Refer to Amplifier and Scanner Reference Guide

Honeywell	Function	Fireye
L1	Hot – 120 VAC	L1
L2	Ground – Neutral	L2
L1 - 16	Limit	L1 - 7
8 - 3	Run Interlock (Air Flow Switch)	7-6
8	Burner Motor	8
18	Ignition	4
5	Intermittent Pilot	3
6	Main Fuel	5
9	Alarm	A
F	Flame Rod or Photocell	S2
G	Ground	S1

Note 1 Select purge time via dipswitches, select recycle / non-recycle as required, select PTFI timing as required.

Refer to bulletin MC-5000 for detailed operation.